

CATHETER PRODUCTION FIXTURES



BALLOON TRIMMER/TIP CUTTER

Performs precision square end cuts to specified lengths. Quick and repeatable results on items such as balloon necks and catheter tips.




SLITTING FIXTURE, PNEUMATIC OR MANUAL

This fixture is used to make axial slits precisely aligned with the tubing centerline through one wall only - such as for forming an inner lumen opening on PTCA distal shaft tubing. The pneumatic model features a foot pedal control.



MARKER BAND PRE-CRIMPER

The Marker Band Pre-Crimper simultaneously positions and pre-crimps marker bands on a catheter shaft in preparation for the swaging process.

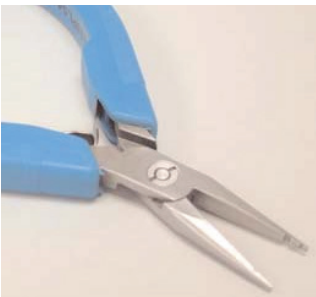

CRIMPING PLIERS

The Crimping Pliers are used to manually position marker bands on the catheter shaft. The pliers are custom made to your specifications, with up to 5 crimping grooves depending on the sizes required.

CATHETER STAND

This rollaway stand is ideal for transferring semi- finished and finished catheters between work stations. The stand holds approximately 80 catheters. Catheters are hanging by the luer hub that is retained in a slot on the side of the cross bars. Placement and removal of catheters is fast and easy.

