



# BFMS-500-S2

## SPLIT MOLD BALLOON FORMING MACHINE


The Split Mold Balloon Forming Machine (BFMS-500-S2) is the third machine in a range of balloon forming machines that is being developed by MPT EuropeBV and has full servo control on the proximal and distal axis. This allows for precise and fast stretching of the parisons during the balloon blowing process. The axis have force control and individual loadcell systems allowing forces to be monitored and used as control parameters during the process.

**Available Options:** Integrated High-Pressure Generation • Active Pressure Drop • Control (APDC) and Parison Pre-Heating



### KEY FEATURES

- Flexible Process Interface for virtual limitless process cycle options on large 19" full color touch panel interface.
- Fast and strong full servo-controlled axis for repeatable and reliable stretching of the parison materials during the forming process.
- Integrated safety light curtain with intuitive user interaction for safe operation.
- Optional High-Pressure system integrated eliminating the need for a high-pressure factory network or the use of N2-bottles.
- Standard equipped with a safety light curtain with intuitive operator feedback.
- Large 19" full color touch screen user interface for easy overview of the machine behaviour.
- Standalone Flexible Process Interface software package available for off-line development of processes.
- Parison pre-heating system to reduce cycle times.
- Quick exchange of mold head (heat/cool block) without the need to manual connect/disconnect water hoses and connectors.

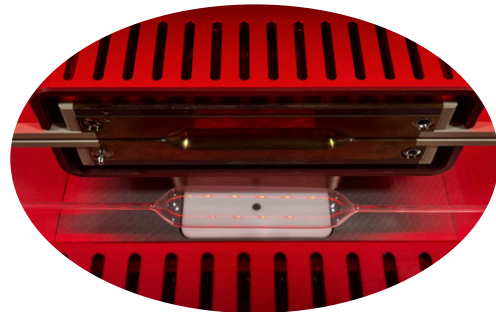

**Now with Rapid Heat Cool Mold Technology**  
– Up to 30% Faster than the Original.

### BALLOON FORMING

An innovative system lets the user exchange the split mold heat and cool heads without the use of any tooling in under 10 seconds.

The split mold die allows for complex designs and can be quickly replaced. The high closing force and perfect alignment make the system reliable and stable in use.

The machine can fitted with the MPT Europe BV developed Active Pressure Drop Control (option) provides a significant control handle to the blowing process and allows for more optimization of your balloons.

Another high impact design optimization step has been made in the process control software with the Flexible Process Interface (FPI).

This allows for a virtual limitless process control environment. Every process cycle you desire or will desire in the future can easily be composed by yourselves. Furthermore the revolutionary but simple way of representing the process ensures you always know what is happening, what is going to happen and why it is happening.

Additional software tools are available for developing processes offline on your desktop computer.

Graphic representation of the measured values (pressures, strokes, forces) can be selected to be shown on screen during the process for the operators or engineers to monitor the process and interpret the behaviour of the balloon being blown.

# BFMS-500-S2

## BALLOON FORMING MACHINE

TECHNICAL SPECIFICATION	BFMS-500-S2
Stretch force	500 N max
Stretch speed	250 mm/s max. (servo controlled)
Stretch acceleration	2000 mm/s <sup>2</sup>
Stretch length	500 mm proximal and 500 mm distal
Clamping	Self aligning high force distal and proximal clamps
Inflation pressure	1-50 bar max +/- 0.2%
Pressure control	Active Pressure Drop Control (APDC)
Temperature heating system	20 °C - 220 °C +/- 0.5 °C
Preheat system	Internal and external parison pre-heating
Balloon diameter	1-50mm
Balloon length	1-320mm
GUI	19" color touch panel
Control software	Flexible Process Interface (FPI) Zoomable process graphs with process markers Recipe based Password levels (operator, engineer, calibrator) External FPI software available for off-line development Remote support option
Indicators	Optional signal light / acoustic alarm (user programmable)
Ethernet	2x
USB	4x
Required air pressure	7 bar minimum (pre-dried in case of integrated pressure boosting system)
N2 system	Using external N2 system (bottles or factory line) / optional high-pressure generator system require 7 bar feed pressure with internal 1L high pressure buffer vessel
Power supply	3-phase 208VAC or 380VAC / 5kW
Cooling circuit	Cooler with 64L reservoir + temperature and level detection
Safety systems	Light curtain with intuitive operator feedback



Medical Production Technology is proud to be an MMT company – Leading provider of catheter balloon forming, folding and pleating, thermal bonding, and stent crimping solutions.

Medical Manufacturing Technologies (MMT) brings together applications expertise, technical solutions, and aftermarket support to revolutionize medical device manufacturing. [Learn more at mmt-inc.com](http://mmt-inc.com).